


# Your Y-Valve

## How it works

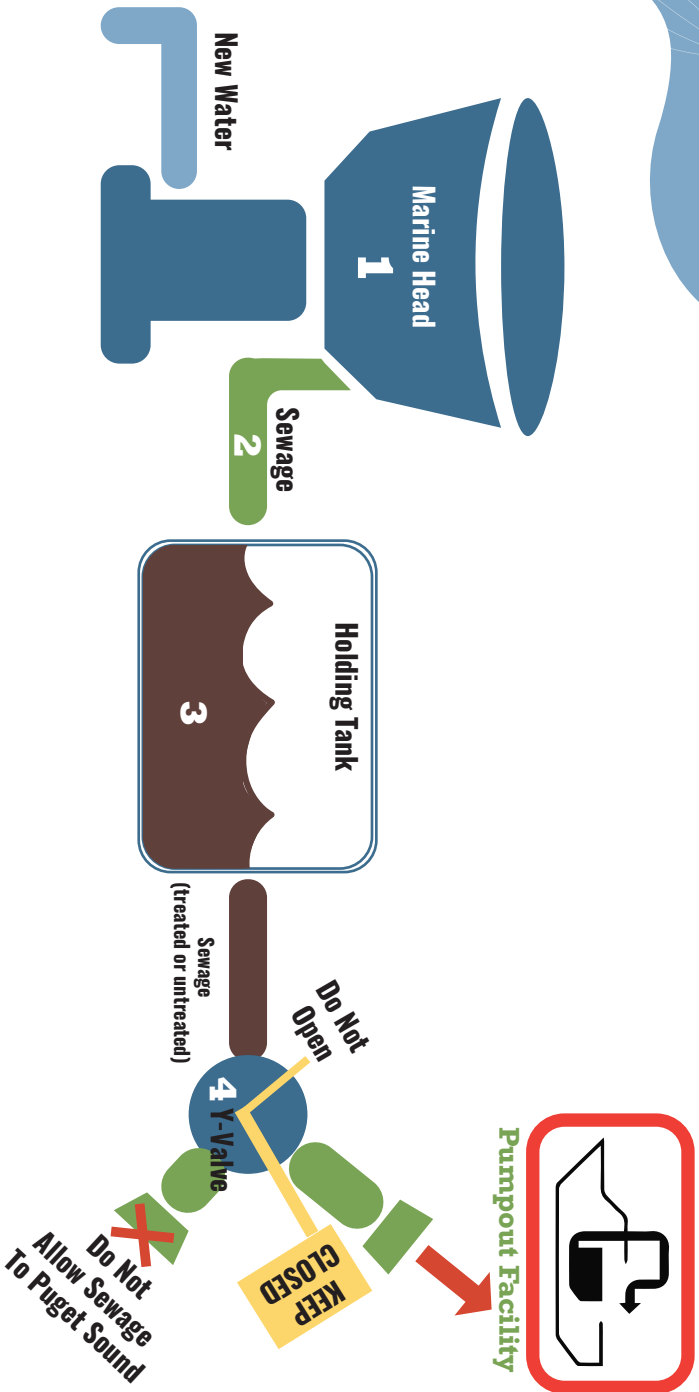

# How It Works

- 1.** The Marine head or toilet bowl.
- 2.** When you flush, it leads sewage to holding tank.
- 3.** Sewage continues to Y-Valve. *(Remember it looks different on every boat).*
- 4.** Y-VALVE should be in CLOSED position and the sewage will remain in your holding tank until you pump it out.

Y-VALVE is part of the deck fitting system. It directs sewage from the holding tank either to the deck waste fitting or overboard. Most Y-Valves have arrows showing the direction of the flow. The CLOSED position directs the sewage to your deck waste fitting and not overboard.

**In the No Discharge Zone, make sure your Y-Valve is in the CLOSED position. Once closed, secure your Y-Valve with a non-releasable zip tie or padlock or remove the handle entirely.**

**Test your sewage system by placing dye tabs in your toilet bowl and then flush to check if your Y-Valve is working properly to prevent discharges.**